

Changing the Combination

 
WEISER.



- 1.** Set the factory combination **(0-0-0)** and pull up the shackle.

2.

Lift the shackle, rotate it 180° counterclockwise, aligning the small notch on the shackle with the groove on the lock body, and press down firmly.



- 3.** While holding it down, rotate the dials to set your new 3-digit combination.

4.

Return the shackle to its original position by turning it clockwise - **your new combination is now set.**



Changement de la combinaison

 
WEISER.



- 1.**
Régler la combinaison d'usine (**0-0-0**) et tirer sur l'anse.

2.

Soulevez l'anse, faites-la pivoter de 180° dans le sens antihoraire, alignez la avec la rainure du corps du cadenas, puis appuyez fermement.



- 3.**
Soulever l'anse, la tourner de 90° dans le sens antihoraire, aligner l'encoche de l'anse avec la rainure du corps du cadenas, puis appuyer fermement.

4.

Ramener l'anse à sa position initiale - **votre nouvelle combinaison est maintenant réglée.**

